

MUD-UK 110 Utility Wagon Net

Fitting Instructions



Land Rover Solutions

www.mudstuff.co.uk

Thank you for purchasing a MUD-UK 110 Utility Wagon Net. This package will contain:

2 x Wire frame nets

4 x self-adhesive Protection Pads



14 x Wire frame fastener clips


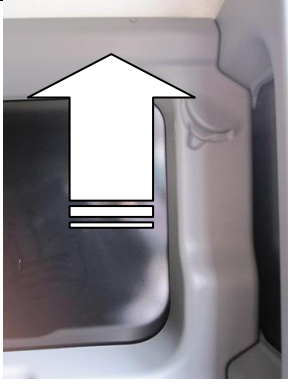
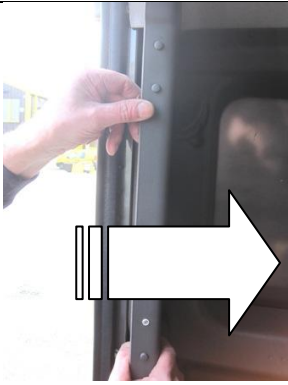


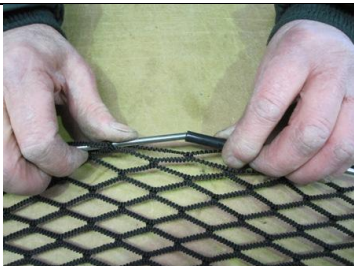
14 x Self tapping fixing screws



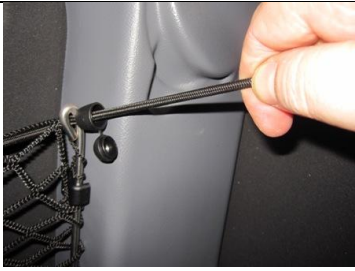


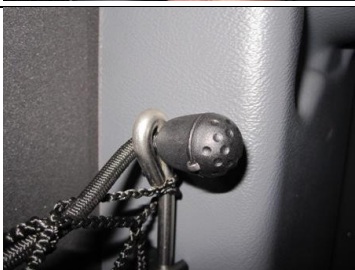
6 x Land Rover Genuine Parts fir tree fasteners

You will require for fitting. Philips screwdriver. Bradawl. 3mm drill bit and drill. Trim removal tool.

Fitting Instructions.

<p>1. Remove the fixing screws for the grab handle and remove grab handle.</p>	
<p>2. Remove the two trim fasteners from side panel trim in the rear of the vehicle.</p>	

<p>3. Remove the trim fasteners on the door pillar or 'C Pillar' and remove the trim from the side of the vehicle.</p>	
<p>4. The side panel is held in place by spring clips along the gutter. The clip location can be identified by the raised plastic rivet along the top edge of the trim panel. Lift the trim upwards and away from the gutter to release. There is no need to remove the seat belt. The trim panel will swing out of the way far enough to install the protection pads</p>	
<p>5. The rear corner trim is held in place with two clips along the door opening. Push the trim towards the front of the car to release.</p>	
<p>6. The protection pad for the rearmost section of the side panel will fix straight into place without the need for any trimming. The front section will need cutting to size. Use the off-cut to fix behind the trim section either side of the rear door. Stick the</p>	
<p>7. With the pads in place refit the plastic trim to the vehicle. If the original fir tree fasteners have been damaged when removing them - replace with the new fir tree fasteners supplied.</p>	
<p>8. Join the two halves of the wire frame together</p>	

<p>9. Attach the plastic fixing clips to the net at evenly spread intervals</p>	
<p>10. Offer the net up to the inside of the trim and fix into place using the screws provided. Use a small bradawl to make a hole in the plastic trim</p>	
<p>11. With the net fixed in place tension the elastic cord by pulling on it until you reach your preferred tension across the top of the net.</p>	
<p>12. Tie a knot in the elastic cord</p>	
<p>13. Cut off the excess with a knife or scissors</p>	
<p>14. Push the knot inside the 'golf ball' and close the cap</p>	
<p>15. Attach a fixing clip to the vertical strengthening rib.</p>	